

UNDER HOOD

GENERAL MAINTENANCE

(2005/11-2006/01)

1. GENERAL NOTES

- Maintenance requirements vary depending on the country.
- Check the maintenance schedule in the owner's manual supplement.
- Following the maintenance schedule is mandatory.
- Determine the appropriate time to service the vehicle using either miles driven or time elapsed, whichever reaches the specification first.
- Maintain similar intervals between periodic maintenance, unless otherwise noted.
- Failing to check each vehicle part could lead to poor engine performance and increase exhaust emissions.

2. WINDSHIELD WASHER FLUID

- (a) Check that there is sufficient fluid in the tank.

3. ENGINE COOLANT LEVEL

- (a) Check that the coolant level is between the "FULL" and "LOW" lines on the see-through reservoir.

4. RADIATOR AND HOSES

- (a) Check that the front of the radiator is clean and not blocked by leaves, dirt or bugs.
- (b) Check the hoses for cracks, kinks, rot or loose connections.

5. BATTERY ELECTROLYTE LEVEL

- (a) Check that the electrolyte level of all the battery cells is between the upper and lower level lines on the case.
- HINT:
If the electrolyte level is difficult to see, lightly shake the vehicle.

6. BRAKE FLUID LEVEL

- (a) Check that the brake fluid levels are near the upper level lines on the see-through reservoirs.

7. ENGINE DRIVE BELT

- (a) Check the drive belt for fraying, cracks, wear or oiliness.

8. ENGINE OIL LEVEL

- (a) Check the level on the dipstick with the engine stopped.

9. AUTOMATIC TRANSAXLE FLUID LEVEL

Type	See procedures
U140F	See page AX-102
U241E	See page AX-102

10. EXHAUST SYSTEM

- (a) Check for unusual exhaust sounds or abnormal exhaust fumes. Inspect the cause and repair it.

GENERAL MAINTENANCE

(2006/01-)

1. GENERAL NOTES

- Maintenance requirements vary depending on the country.
- Check the maintenance schedule in the owner's manual supplement.
- Following the maintenance schedule is mandatory.
- Determine the appropriate time to service the vehicle using either miles driven or time elapsed, whichever reaches the specification first.
- Maintain similar intervals between periodic maintenance, unless otherwise noted.
- Failing to check each vehicle part could lead to poor engine performance and increase exhaust emissions.

MA

2. WINDSHIELD WASHER FLUID

- (a) Check that there is sufficient fluid in the tank.

3. ENGINE COOLANT LEVEL

- (a) Check that the coolant level is between the "FULL" and "LOW" lines on the see-through reservoir.

4. RADIATOR AND HOSES

- (a) Check that the front of the radiator is clean and not blocked by leaves, dirt or bugs.
- (b) Check the hoses for cracks, kinks, rot or loose connections.

5. BATTERY ELECTROLYTE LEVEL

- (a) Check that the electrolyte level of all the battery cells is between the upper and lower level lines on the case.

HINT:

If the electrolyte level is difficult to see, lightly shake the vehicle.

6. BRAKE FLUID LEVEL

- (a) Check that the brake fluid levels are near the upper level lines on the see-through reservoirs.

7. ENGINE DRIVE BELT

- (a) Check the drive belt for fraying, cracks, wear or oiliness.

8. ENGINE OIL LEVEL

- (a) Check the level on the dipstick with the engine stopped.

9. AUTOMATIC TRANSAXLE FLUID LEVEL

Type	See procedures
U151E	See page AX-126
U151F	See page AX-126

10. EXHAUST SYSTEM

- (a) Check for unusual exhaust sounds or abnormal exhaust fumes. Inspect the cause and repair it.